

*How to change blinds slat*


Pull cord out of bottom rail plug.




Untie the knot.




“Back out” cord upward to area of slat to be removed

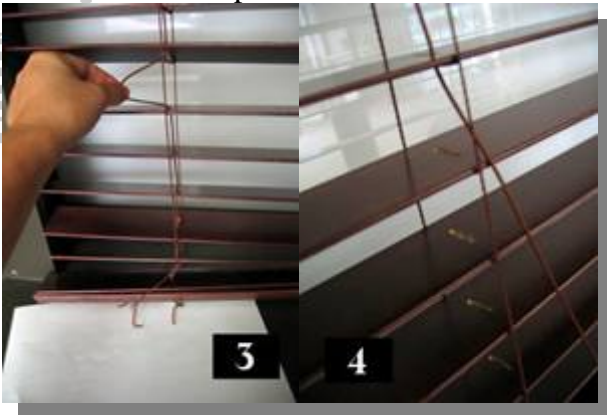

Slide out defective slats

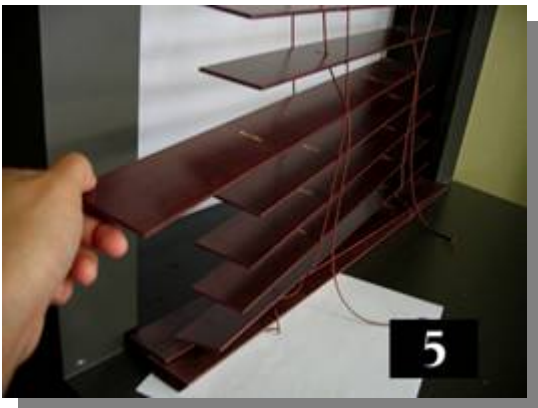

Re-thread pull cord through route holes in slats all the way down through the bottom rail and the bottom rail plug.

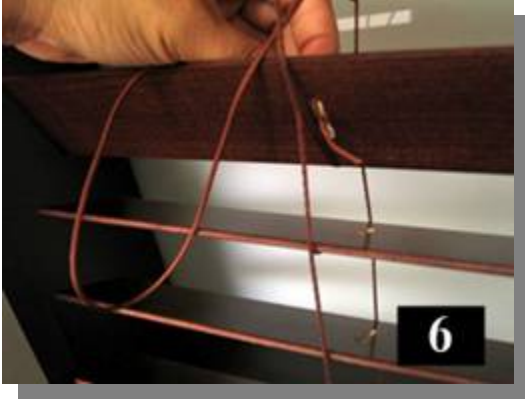

Re-tie knot in cord



Pull the lift cord to have the lift cord back in place.

