


## HOW TO MEASURE ARCH

The Royal Windows Arch and Eyebrow are made so they can be fitted into almost any window. This is possible by the exclusive molding that frames these products and also by accurate measuring. Just follow these simple instructions to insure a perfect fit.

### ARCH

1. Measure base width of Arch opening.
2. Measure height at three points (see diagram A).
3. Supply the smallest of the three measurements for the height.


DIAGRAM A

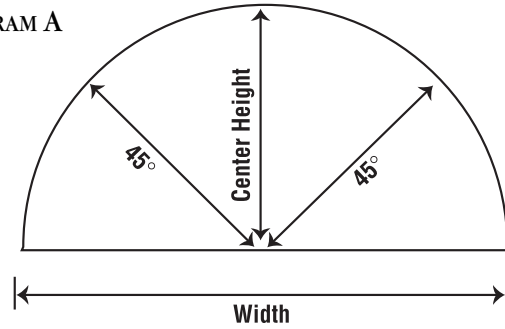

### 1/4 ARCH

1. Measure base width.
2. Measure height and 45 degree angle (see diagram B).
3. Supply the smallest of the three measurements for the width and height.


DIAGRAM B

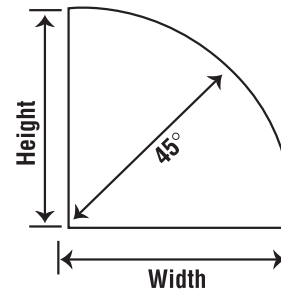

### EYEBROW

1. Measure base width of Eyebrow opening.
2. Measure drop on left and right (see diagram C).
3. Measure center height.
4. Supply all four dimensions.

DIAGRAM C

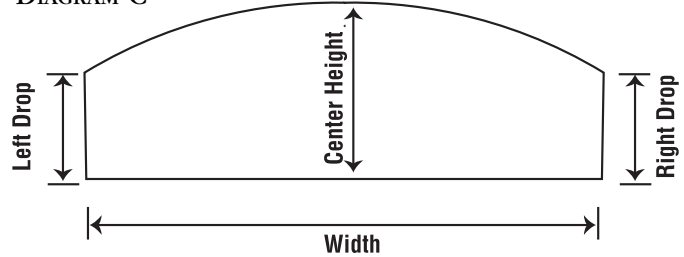

### 1/4 EYEBROW

1. Measure base width of arch opening.
2. Measure left drop.
3. Measure center height (see diagram D).
4. Measure right drop.
5. Supply all four dimensions.

DIAGRAM D

